

Handbook (BioKey® Fingerscan, BASIC, V12.x-2022)

Fingerprint Sensor: Operating Temperature: IP Class: Speicherkapazität: Declaration of Conformity (CE):



Swipe Sensor without Latentfinger -20 ~ +85 °C IP65 (Outdoor, Waterproof) max. 35 Fingerprints Template (max. 2 Masterfinger) after EU-Guideline 2002/95/EG

Function	Description	To do
Step 1: Enroll One Masterfinger	Provide a Masterfingers (the same Finger swipe over the Sensor at least 6-times)	Initial State (red + green LEDs ON) → Enroll the first Masterfinger, at least 6-times over the Sensor
Step 2: Enroll One Userfinger	Userfingers are used to open the door (Userfinger should be different from the Masterfinger)	Swipe the Masterfinger → red + green LEDs On → Enroll the new Userfinger, at least 6-times over the Sensoruntil the red + green LED flash shortly
Step 3: Open Door	with Userfinger	Swipe one Userfinger over the Sensor
Reset (Delete All)	Reset device to initial state Reset Code =	with Infrared Keypad: DA -> Reset Code-> OK the red + green LED on

II. All Functions (in Details)

1. Masterfinger Enrollment (Swipe the first Master Finger at least 6-times over the Sensor)

Condition: Device is initialized; Red+Green LEDs are alight

Swipe the masterfinger first time over the sensor.

Red+Green LEDs: flash for appr. 2 sec->go out ->are alight again for the next Masterfinger

Swipe the master finger second time over the sensor again.

Red+Green LEDs: flash for appr. 2 sec->go out ->are alight again for the next Masterfinger

- Swipe the masterfinger <u>at least 6-times</u> over the Sensor, <u>until the Green LED</u> flashes for appr. 3 sec.

The Masterfinger enrollment is completed. It is now possible to enrol Userfinger.

2. Userfinger Enrollment (Userfinger should be different from the Masterfinger!)

- Swipe the masterfinger once over the sensor. Red+Green LEDs: flashes for appr. 3 secs -> go out
- Swipe the new Userfinger over the Sensor
- Do repeat at least 6-times
- Until the Red+Green LEDs: flashes for appr. 3 secs -> go out The Userfinger enrollment is completed. It is now possible to open the door with Userfinger

3. Identification

Swipe an Userfinger, if OKAY, green LED, otherwise red LED

4. Delete All (Reset), Factory setting (Reset Code= 6-digit):

With the Infrared Keypad before the Fingerscan Reader: DA -> Reset Code -> OK

Device is initialized; Red+Green LEDs are alight

to change the Reset Code (Very Important!):

D-> E-> Old Code -> OK-> NEW CODE -> OK -> NEW CODE (repeat) -> OK





Tips: Alternative reset: Swipe the Masterfinger three times over the sensor and waiting for about 30 sec -> Device is initialized.

